



ECS - INDUSTRIAL CONTROL SWITCH EMERGENCY STOP

1. FEATURES

- Detachable contact block for easy installation and removal. It can meet variety of needs and improve work efficiency.
- IP65 waterproof type. It is designed for liquid and oil prevention and enables to be used in different environment.
- In accordance with the standards of UL, cUL, CE, CCC, and TUV.

2. SPECIFICATIONS

2-1. ELECTRICAL

| | |
|--|--|
| 2-1-1. Rated thermal current | 10A |
| 2-1-2. Rated insulation voltage | 650V |
| 2-1-3. Utilization category | AC-15(A600) or Ue 240V / Ie 3A Ue 380V / Ie 1.9A DC-13(P600) or Ue 250V / Ie 0.55A |
| 2-1-4. Minimum switching capacity [ref.] | 3V DC/AC, 5mA |
| 2-1-5. Dielectric strength | 2500V AC, 1 min. |
| 2-1-6. Insulation resistance | 100M Ω min. at 500V DC |
| 2-1-7. Contact resistance | 50m Ω max. (initial) |


2-2. MECHANICAL AND ENVIRONMENTAL

| | |
|--|--|
| 2-2-1. Operating temperature | -25 $^{\circ}$ C ~ +70 $^{\circ}$ C (without icing or condensation) -25 $^{\circ}$ C ~ +55 $^{\circ}$ C (for illuminated type) |
| 2-2-2. Storage temperature | -40 $^{\circ}$ C ~ +85 $^{\circ}$ C |
| 2-2-3. Humidity | 45% ~ 85% RH |
| 2-2-4. Degree of protection | IP65 (from the front of the panel) |
| 2-2-5. Degree of contamination | 3 (IEC 60947-5-1) |
| 2-2-6. Vibration resistance | 10-55Hz amplitude 0.5mm |
| 2-2-7. Shock resistance | 100 m/s ² (10G)(malfunction) 1000 m/s ² (100G)(destruction) |
| 2-2-8. Mechanical Life | 300,000 operations(maintained type) frequency 1800 operations/hr |
| 2-2-9. Electrical Life | 100,000 operations frequency 1800 operations/hr |
| 2-2-10. Operation Force(from 1a1b)[ref.] | 30N (maintained type) |
| 2-2-11. Operation travel | over 4 mm |
| 2-2-12. Connection type | M3.5 screw connection |
| 2-2-13. Direct opening action | Direct opening mechanism of NC contact to open the circuit⊖ |

| | | | | | |
|------------|---------------------------------|---------|--------|------|---|
| ECE | EXCEL CELL ELECTRONIC CO., LTD. | NO. | A31230 | | |
| | | Edition | 2 | Page | 2 |

SPECIFICATION

3. CONSTRUCTION

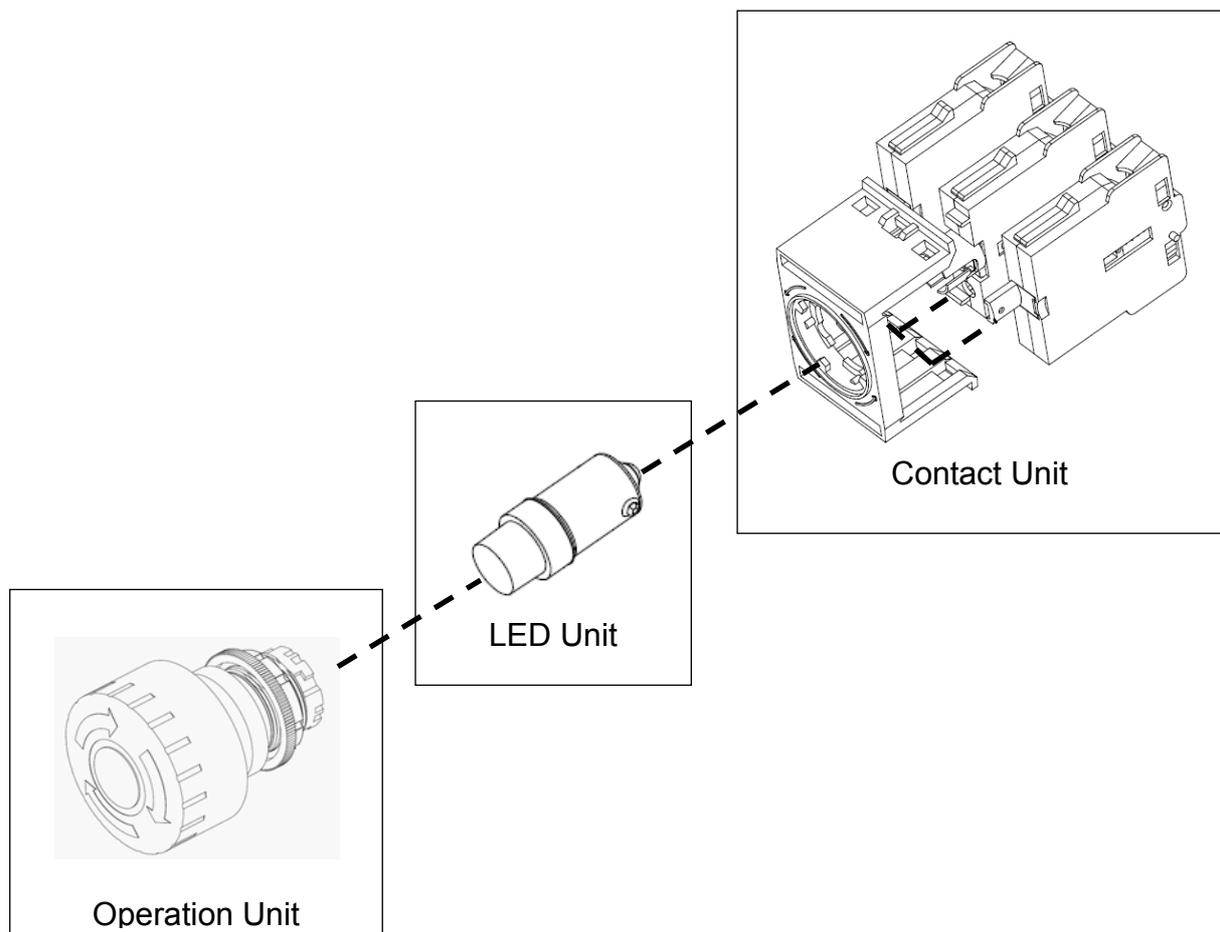


- Operation unit, LED unit, and contact unit (contact blocks) can be sold separately.
- Please see [4.Part numbering system] for operation unit part number. For other accessories (LED lamp, contact block, etc.), please refer to accessory part in catalog.

| | | | | |
|---|---------------|---------|---|------|
|  EXCEL CELL ELECTRONIC CO., LTD. | NO. | A31230 | | |
| | SPECIFICATION | Edition | 2 | Page |

4. PART NUMBERING SYSTEM

ECS - XX X E1 R X - XX X 0 - L XX R

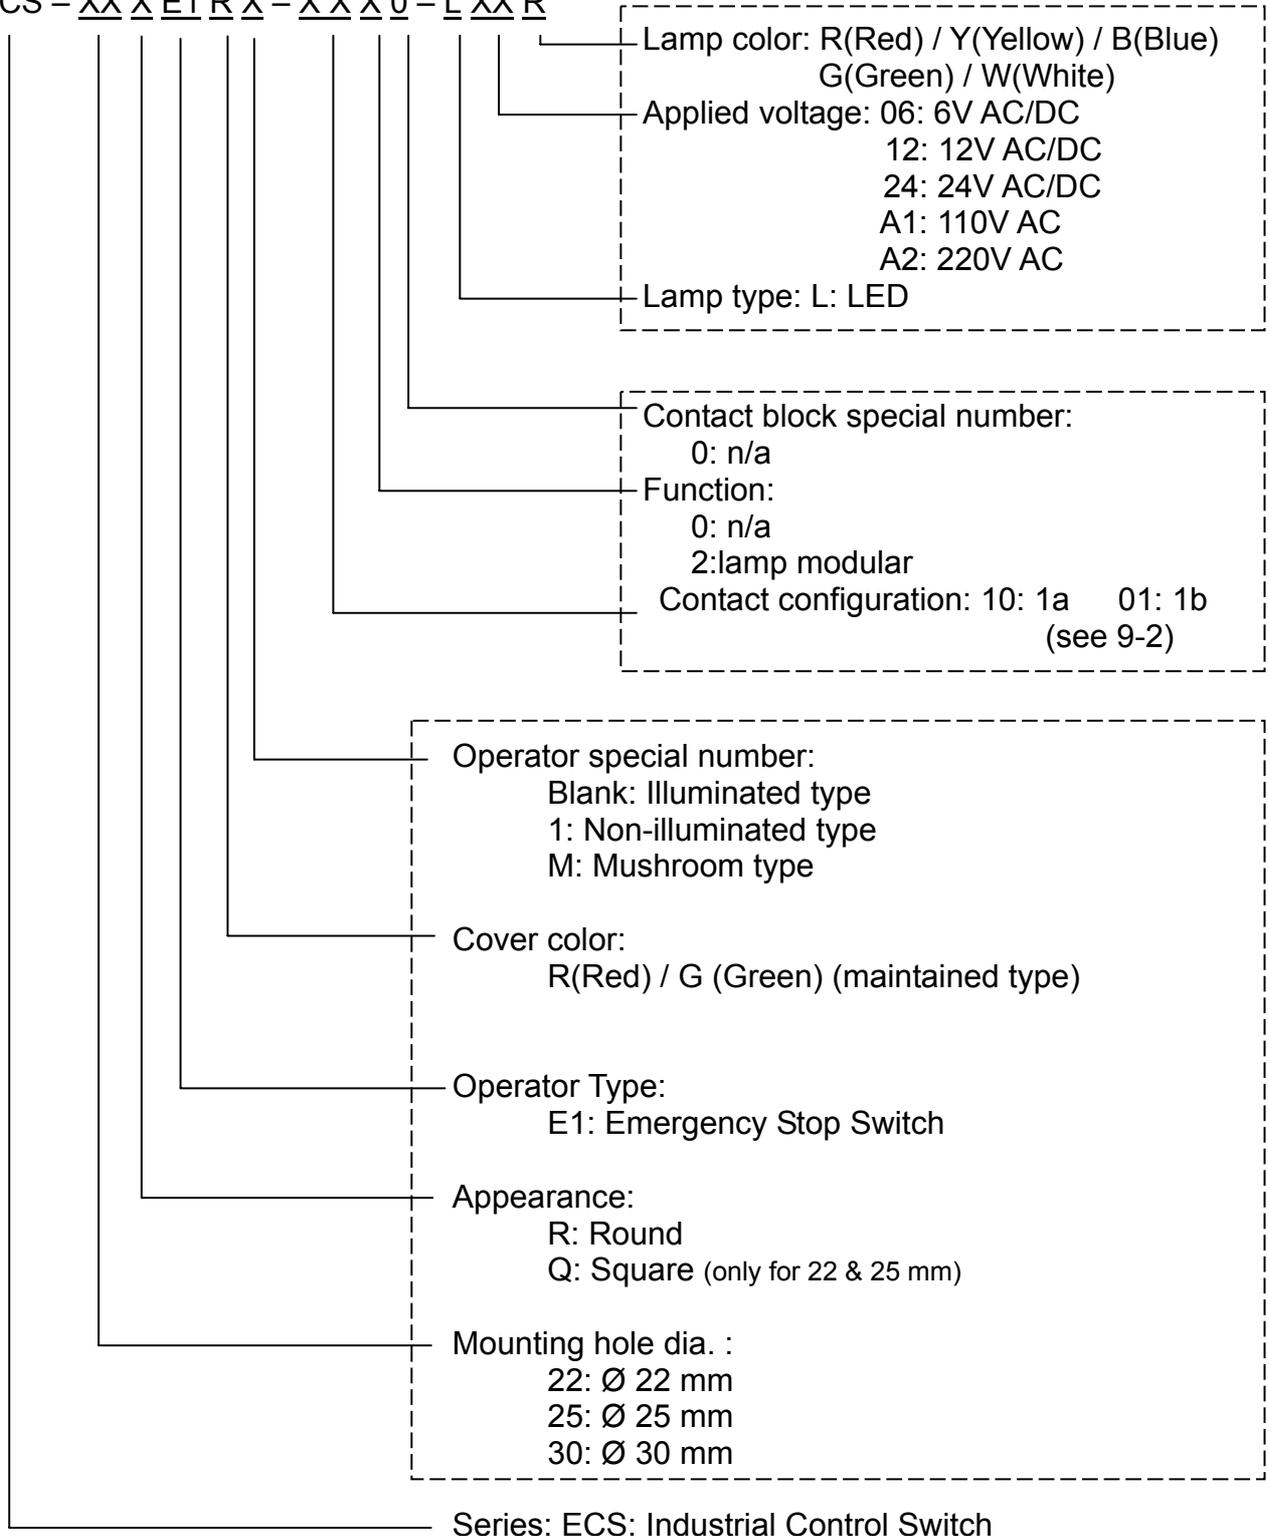

| | | | | | |
|------------|--|------------|----------------------|--|----------|
| ECE | EXCEL CELL ELECTRONIC CO., LTD. | NO. | A31230 | | |
| | | | SPECIFICATION | | 2 |


5. INSTALLATION

5-1. Panel thickness

- The panel thickness must be 1 to 7 mm.
- Take into consideration about the thickness of accessories (such as name plate, switch guard, etc.) while using.

5-2. Panel cutout

- Cutout diameter and distance

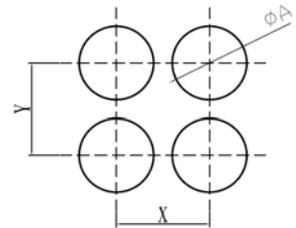


Unit: mm

| | 22R / 25R | 22Q / 25Q | 30R |
|---|---|---|------------------------------------|
| A | 22.3/25.3 ^{+0.4} ₋₀ | 22.3/25.3 ^{+0.4} ₋₀ | 30.5 ^{+0.5} ₋₀ |

Unit: mm

| | 22R / 25R | 22Q / 25Q | 30R | Long Lever Selector Switch Emergency Stop Switch |
|---|-----------|-----------|-----|---|
| X | 30 | 32 | 50 | 50 |
| Y | 50 | 50 | 65 | 50 |

- Key recess cutout (22mm only)

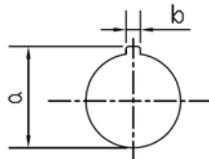

Unit: mm

| Mounting Hole(Ø) | a | b |
|------------------|------------------------------------|-----------------------------------|
| 22 | 24.1 ^{+0.5} ₋₀ | 3.2 ^{+0.2} ₋₀ |

- Panel installation


1. Place the operation unit through panel mounting hole.
2. Install the nut by using tightening tool.
3. Make sure the operation unit fix on the panel firmly.


5-3. Operation unit and contact unit installation

1. Fix the operation unit on the panel.
2. Connect the operation unit with snap-fit joint part of contact unit.
3. Rotate contact unit to fix firmly as shown in the left figure.

| | | | | |
|---|---------------|---------|---|------|
|  EXCEL CELL ELECTRONIC CO., LTD. | NO. | A31230 | | |
| | SPECIFICATION | Edition | 2 | Page |

5-4. LED lamp installation
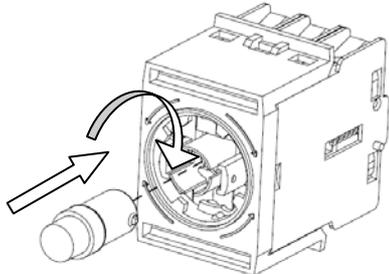
| | |
|---|--|
|  | <ol style="list-style-type: none"> 1. Aim LED lamp to the lamp holder and press down to the bottom. 2. Rotate the LED lamp to make sure the lamp is firmly installed. 3. While installation and removal, please hold the metal part of LED lamp to avoid damaging LED lamp. |
|---|--|
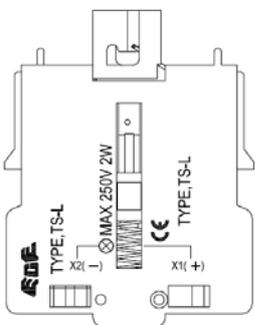
| | |
|--|---|
|  | <ol style="list-style-type: none"> 1. When using DC LED lamp, please connect the positive pole (+) to X1 terminal as shown in left figure. 2. The LED lamp may be erroneously lightened by a leaking current from the circuit. The malfunction can be prevented by connecting a shunt resistor in parallel with the LED lamp. |
|--|---|

6. PACKAGING

6-1. ECS product is packed without assembly (packed by set), 10 sets per box.

6-2. Label information

- | | |
|-------------------|-------------------------|
| (1) part number | (6) QC inspection stamp |
| (2) Lot number | (7) Company mark |
| (3) Quantity | (8) Company name |
| (4) Tester number | (9) Notice |
| (5) Date code | |

7. DIMENSIONS

7-1. See attached drawings

8. OPTIONS

8-1. Key recess type operation unit is available (22mm only)

8-2. Ø22mm and Ø25mm type have the same structure. Different thickness of O-rings can be ordered separately to fit into Ø22mm and Ø25mm hole in the panel.

8-3. LED Specification

| | |
|-----------------------|---------------------|
| LED Type | BA9S-T8 |
| Durability(reference) | Approx. 50,000 Hrs. |
| Voltage | Printed on the LED |

8-4. For other accessories (name plate, control box, and etc.), please refer to accessory part in the catalog.

| | | | | |
|--|----------------------|----------------|----------|-------------|
|  EXCEL CELL ELECTRONIC CO., LTD. | NO. | A31230 | | |
| | SPECIFICATION | Edition | 2 | Page |

9. REMARK

9-1. Safety Certification

| Safety Standard | Certification |
|-------------------------------------|-----------------------------|
| UL-508 | UL / cUL , file NO. E155181 |
| CSA C22.2 NO.4 | |
| EN60947-5-1 | R50363071 |
| EN60947-5-5 (Emergency Stop Switch) | R50362996 |
| CCC GB14048.5 | 2016010305912684 |

9-2. Contact Configuration

| Code | Contact blocks | | without function block | with function block |
|------|----------------|----|------------------------|---------------------|
| | NO | NC | | |
| 10 | 1 | 0 | • | • |
| 01 | 0 | 1 | • | • |
| 11 | 1 | 1 | • | • |
| 20 | 2 | 0 | • | • |
| 02 | 0 | 2 | • | • |
| 12 | 1 | 2 | • | • |
| 21 | 2 | 1 | • | • |
| 30 | 3 | 0 | • | • |
| 03 | 0 | 3 | • | • |
| 31 | 3 | 1 | • | • |
| 13 | 1 | 3 | • | • |
| 22 | 2 | 2 | • | • |
| 40 | 4 | 0 | • | • |
| 04 | 0 | 4 | • | • |
| 41 | 4 | 1 | • | |
| 14 | 1 | 4 | • | |
| 23 | 2 | 3 | • | |
| 32 | 3 | 2 | • | |
| 50 | 5 | 0 | • | |
| 05 | 0 | 5 | • | |

Remark :

- The colors of contact block are the followings: 1 NO: green, 1 NC: red
- Maximum 5 contact blocks for every contact unit.

9-3. CAUTION

- To prevent injury, this device must be disconnected from all power sources prior to wiring and other initiating work.
- Use tightening tool when installing the operation unit in the panel cutout. Do not use pliers and do not tighten excessively, otherwise the operation unit may be damaged.
- Make sure contact blocks are firmly fixed on contact holder during assembly. It will avoid contact blocks separated from holder during operation.